




Steel starter screw x 1pc Drill pilot holes, use the starter screw to cut a thread

Brass wood screws x 2pc Fasten the wood screws into the pilot holes

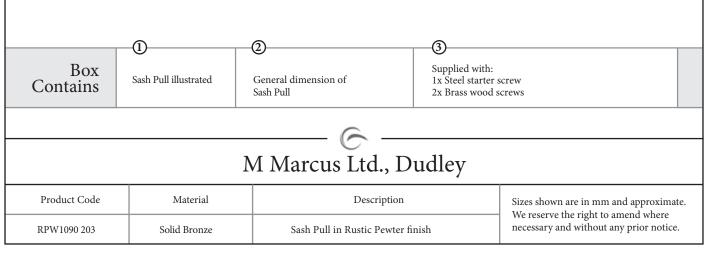

3